

# 2001 Corvette: Diagnostic Trouble Codes

DTC B0016

RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Resistance Low

DTC B0017

RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Open

DTC B0018

RF/Passenger Frontal Deployment Loop (Single Stage or Stage 1) Short to Ground/Voltage Out of Range

DTC B0022

LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Resistance Low

DTC B0024

LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Short to Ground/Voltage Out of Range

DTC B0026

LF/Driver Frontal Deployment Loop (Single Stage or Stage 1) Open

DTC B0051

Deployment Commanded

DTC B0053

Deployment Commanded with Loop Malfunctions Present

DTC B0090

Active Switch Voltage Out of Range

DTC B0091

Active Switch: Wrong State

DTC B0432

Rear Defogger Relay Circuit

DTC B0433

Rear Defogger Relay Circuit

DTC B0502

RH DRL Relay Circuit

DTC B0503

RH DRL Relay Circuit

DTC B0507

LH DRL Relay Circuit

DTC B0508

LH DRL Relay Circuit

DTC B0516

Speedometer Signal Circuit Malfunction

DTC B0521

Tachometer Signal Circuit Malfunction

DTC B0605

BCM Internal Memory Malfunction

DTC B0846

Battery 2 Out of Range

DTC B0846 or B0851

Battery Out of Range

DTC B0851

Battery 1 Out of Range

DTC B0856

+5 Volt Reference Out of Range

DTC B1000

ECU Malfunction

DTC B1001

Option Configuration Error

DTC B1512-B1537

Driver Information Center (DIC) Switch Circuit

DTC B1542

Oil Temperature Circuit Short to Ground

DTC B1543  
Oil Temperature Circuit Open

DTC B2172, B2177, B2182, B2187, B2192, or B2197  
Power Seat Switch Circuit

DTC B2202-B2208  
Window Switch Circuit

DTC B2222-B2224  
Mirror Select Switch Circuit

DTC B2226-B2234  
Mirror Switch Circuit

DTC B2236-B2239  
Door Lock Switch Circuit

DTC B2242-B2244  
Memory Switch Circuit

DTC B2252-B2253  
Door Key Cylinder Circuit

DTC B2262-B2265  
Mirror Position Sensor Signal Circuit

DTC B2272-B2273  
Mirror Motor Control Circuit

DTC B2274-B2275  
Window Motor Control Circuit

DTC B2276-B2277  
Door Lock Control Circuit

DTC B2278-B2279  
Door Switch Control Circuit

DTC B2282  
Battery #1 Circuit

DTC B2282-B2285  
Battery Supply Voltage Circuit

DTC B2283  
Battery #1 Circuit

DTC B2284  
Battery #2 Circuit

DTC B2285  
Battery #2 Circuit

DTC B2286-B2287  
Mirror Position Sensor Circuit

DTC B2403  
Front Fog Lamp Switch Circuit

DTC B2408  
Rear Fog Lamp Switch Circuit

DTC B2482  
Backup Lamp Relay Circuit

DTC B2483  
Backup Lamp Relay Circuit

DTC B2527  
Horn Relay Circuit

DTC B2528  
Horn Relay Circuit

DTC B2567  
Folding Top Release Switch Circuit

DTC B2573  
Hatch Release Switch Circuit

DTC B2578  
Right Front Turn Signal Monitor Circuit

DTC B2583

## Left Front Turn Signal Monitor Circuit

DTC B2587

Column Lock/Unlock Drive A

DTC B2588

Column Lock/Unlock Drive A

DTC B2592

Column Lock/Unlock Drive B

DTC B2593

Column Lock/Unlock Drive B

DTC B2597

Traction Control System Switch Circuit

DTC B2600

Seat Motor to Battery Voltage

DTC B2605-B2607

Seat Position Sensor Circuit

DTC B2647

Ambient Light Sensor Circuit Low

DTC B2648

Ambient Light Sensor Circuit High

DTC B2721

PASS-Key Detection Circuit

DTC B2722

PASS-Key Detection Circuit

DTC B2723

PASS-Key Detection Circuit

DTC B2735

PASS-Key Programming Mode Active

DTC B2795

Suspension Control Select Switch Circuit Malfunction

DTC B2852  
Telescoping Column In Switch Shorted to Ground

DTC B2857  
Telescoping Column Out Switch Shorted to Ground

DTC B2860  
Telescoping Column Position Sensor Failure

DTC B3109  
Keyless Entry Transmitter Low Battery

DTC B3577  
Suspension Control Select Switch Contact Malfunction

DTC C0550  
ECU Malfunction

DTC C0563  
Calibration ROM Checksum Error

DTC C0615, C0620, C0625 or C0630  
Suspension Position Sensor Circuit

DTC C0665  
Chassis Pitch Signal Circuit

DTC C0690  
Damper Control Relay Circuit Malfunction

DTC C0691  
Damper Control Relay Circuit Range

DTC C0693  
Damper Control Relay Circuit High

DTC C0695  
Position Sensor Overcurrent (8 volt supply)

DTC C0710  
Steering Position Signal Malfunction

DTC C0750, C0755, C0760, or C0765  
Tire Pressure Sensor Circuit

DTC C1214  
Solenoid Valve Relay Contact or Coil Circuit Open

DTC C1217  
Pump Motor Relay Contact Circuit Open

DTC C1218  
Pump Motor Circuit Shorted to Voltage or Motor Ground Open

DTC C1221-C1235  
Wheel Speed Sensor Circuit

DTC C1236  
Low System Supply Voltage

DTC C1237  
High System Supply Voltage

DTC C1241  
MAGNA STEER Circuit Malfunction

DTC C1242 or C1243  
Pump Motor Circuit

DTC C1247  
Brake Pressure Differential Switch Activated

DTC C1248  
DRP Disabled

DTC C1254  
Abnormal Shutdown Detected

DTC C1255 or C1256  
ECU Malfunction

DTC C1261-C1274  
EBCM Internal Solenoid Circuit

DTC C1276, P1644, or P1689

Delivered Torque Circuit

DTC C1277 or P1571

Powertrain Indicated Traction Control Malfunction

DTC C1278

TCS Temporarily Inhibited By PCM

DTC C1281, C1283, or C1286

VSES Sensors Uncorrected

DTC C1282

Yaw Rate Sensor Bias Circuit Malfunction

DTC C1284 or C1285

Lateral Accelerometer Circuit

DTC C1287 or C1288

Steering Position Sensor Circuit

DTC C1291

Open Brake Lamp Switch Contacts During Deceleration

DTC C1292, C1293, or C1296

Master Cylinder Pressure Sensor Circuit

DTC C1294

Brake Lamp Switch Circuit Always Active

DTC C1295

Brake Lamp Switch Circuit Open

DTC P0101

Mass Air Flow (MAF) Sensor Performance

DTC P0102

Mass Air Flow (MAF) Sensor Circuit Low Frequency

DTC P0103

Mass Air Flow (MAF) Sensor Circuit High Frequency

DTC P0106

Manifold Absolute Pressure (MAP) Sensor Performance



DTC P0107  
Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage

DTC P0108  
Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage

DTC P0112  
Intake Air Temperature (IAT) Sensor Circuit Low Voltage

DTC P0113  
Intake Air Temperature (IAT) Sensor Circuit High Voltage

DTC P0117  
Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage

DTC P0118  
Engine Coolant Temperature (ECT) Sensor Circuit High Voltage

DTC P0125  
Engine Coolant Temperature (ECT) Insufficient for Closed Loop Fuel Control

DTC P0128  
Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature

DTC P0131 or P0151  
HO2S Circuit Low Voltage

DTC P0132 or P0152  
HO2S Circuit High Voltage

DTC P0133 or P0153  
HO2S Slow Response

DTC P0134 or P0154  
HO2S Circuit Insufficient Activity

DTC P0135, P0141, P0155, or P0161  
HO2S Heater Performance

DTC P0137 or P0157  
HO2S Circuit Low Voltage

DTC P0138 or P0158  
HO2S Circuit High Voltage

DTC P0140 or P0160  
HO2S Circuit Insufficient Activity

DTC P0171 or P0174  
Fuel Trim System Lean

DTC P0172 or P0175  
Fuel Trim System Rich

DTC P0200  
Injector Control Circuit

DTC P0218  
Transmission Fluid Overtemperature

DTC P0230  
Fuel Pump Relay Control Circuit

DTC P0300  
Engine Misfire Detected

DTC P0325  
Knock Sensor Module Performance

DTC P0335  
Crankshaft Position (CKP) Sensor Circuit

DTC P0336  
Crankshaft Position (CKP) Sensor Performance

DTC P0341  
Camshaft Position (CMP) Sensor Performance

DTC P0342  
Camshaft Position (CMP) Sensor Circuit Low Voltage

DTC P0343  
Camshaft Position (CMP) Sensor Circuit High Voltage

DTC P0351-P0358

Ignition Coil Control Circuit

DTC P0410

Secondary Air Injection (AIR) System

DTC P0418

Secondary Air Injection (AIR) Pump Relay Control Circuit

DTC P0420 or P0430

Catalyst System Low Efficiency

DTC P0440

Evaporative Emission (EVAP) System

DTC P0442

Evaporative Emission (EVAP) System Small Leak Detected

DTC P0443

Evaporative Emission (EVAP) Purge Solenoid Control Circuit

DTC P0446

Evaporative Emission (EVAP) Vent System Performance

DTC P0449

Evaporative Emission (EVAP) Vent Solenoid Control Circuit

DTC P0452

Fuel Tank Pressure Sensor Circuit Low Voltage

DTC P0453

Fuel Tank Pressure Sensor Circuit High Voltage

DTC P0461

Fuel Level Sensor Performance

DTC P0462

Fuel Level Sensor Circuit Low Voltage

DTC P0463

Fuel Level Sensor Circuit High Voltage

DTC P0480

Cooling Fan Relay 1 Control Circuit

DTC P0481  
Cooling Fan Relay 2 and 3 Control Circuit

DTC P0500  
Vehicle Speed Sensor (VSS) Circuit

DTC P0502  
Vehicle Speed Sensor (VSS) Circuit Low Input

DTC P0503  
Vehicle Speed Sensor (VSS) Circuit Intermittent

DTC P0506  
Idle Speed Low

DTC P0507  
Idle Speed High

DTC P0522  
Engine Oil Pressure (EOP) Sensor Circuit Low Voltage

DTC P0523  
Engine Oil Pressure (EOP) Sensor Circuit High Voltage

DTC P0530  
Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit

DTC P0562  
System Voltage Low

DTC P0563  
System Voltage High

DTC P0567  
Cruise Control Resume Switch Circuit

DTC P0568  
Cruise Control Set Switch Circuit

DTC P0571  
Cruise Control Brake Switch Circuit

DTC P0601-P0607, P1600, P1621, P1627, P1680, P1681, or P1683  
ECU Malfunction

DTC P0608  
Vehicle Speed Output Circuit

DTC P0645  
Air Conditioning (A/C) Clutch Relay Control Circuit

DTC P0650  
Malfunction Indicator Lamp (MIL) Control Circuit

DTC P0654  
Engine Speed Output Circuit

DTC P0704  
Clutch Switch Circuit

DTC P0706  
Trans Range Switch Performance

DTC P0711  
TFT Sensor Circuit Range/Performance

DTC P0712  
Transmission Fluid Temperature (TFT) Sensor Circuit Low Input

DTC P0713  
Transmission Fluid Temperature (TFT) Sensor Circuit High Input

DTC P0719  
Brake Switch Circuit Low Input

DTC P0724  
Brake Switch Circuit High Input

DTC P0740  
TCC Enable Solenoid Circuit Electrical

DTC P0742  
TCC System Stuck On

DTC P0748

## Pressure Control Solenoid Circuit Electrical

DTC P0751

1-2 Shift Solenoid Valve Performance

DTC P0752

1-2 Shift Solenoid (SS) Valve Performance - No Second Or Third Gear

DTC P0753

1-2 Shift Solenoid Circuit Electrical

DTC P0756

2-3 Shift Solenoid Valve Performance

DTC P0757

2-3 Shift Solenoid (SS) Valve Performance - No Third Or Fourth Gear

DTC P0758

2-3 Shift Solenoid Circuit Electrical

DTC P0785

3-2 Shift Solenoid Circuit Electrical

DTC P0801

Reverse Inhibit Solenoid Control Circuit

DTC P0803

Skip Shift Solenoid Control Circuit

DTC P0804

Skip Shift Lamp Control Circuit

DTC P1111

Intake Air Temperature (IAT) Sensor Circuit Intermittent High Voltage

DTC P1112

Intake Air Temperature (IAT) Sensor Circuit Intermittent Low Voltage

DTC P1114

Engine Coolant Temperature (ECT) Sensor Circuit Intermittent Low Voltage

DTC P1115

Engine Coolant Temperature (ECT) Sensor Circuit Intermittent High Voltage

DTC P1120  
Throttle Position (TP) Sensor 1 Circuit

DTC P1125  
Accelerator Pedal Position (APP) System

DTC P1133 or P1153  
HO2S Insufficient Switching

DTC P1134 or P1154  
HO2S Transition Time Ratio

DTC P1220  
Throttle Position (TP) Sensor 2 Circuit

DTC P1221  
Throttle Position (TP) Sensor 1- 2 Correlation

DTC P1258  
Engine Coolant Overtemperature - Protection Mode Active

DTC P1275  
Accelerator Pedal Position (APP) Sensor 1 Circuit

DTC P1276  
Accelerator Pedal Position (APP) Sensor 1 Performance

DTC P1280  
Accelerator Pedal Position (APP) Sensor 2 Circuit

DTC P1281  
Accelerator Pedal Position (APP) Sensor 2 Performance

DTC P1285  
Accelerator Pedal Position (APP) Sensor 3 Circuit

DTC P1286  
Accelerator Pedal Position (APP) Sensor 3 Performance

DTC P1336  
Crankshaft Position (CKP) System Variation Not Learned

DTC P1380

Misfire Detected - Rough Road Data Not Available

DTC P1381

Misfire Detected - No Communication with Brake Control Module

DTC P1415 or P1416

Secondary Air Injection (AIR) System

DTC P1431

Fuel Level Sensor 2 Performance

DTC P1432

Fuel Level Sensor 2 Circuit Low Voltage

DTC P1433

Fuel Level Sensor 2 Circuit High Voltage

DTC P1441

Evaporative Emission (EVAP) System Flow During Non-Purge

DTC P1514

Throttle Body Performance

DTC P1515

Control Module Throttle Actuator Position Performance

DTC P1516

Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance

DTC P1517

Throttle Actuator Control (TAC) Module Performance

DTC P1518

Throttle Actuator Control (TAC) Module Serial Data Circuit

DTC P1574

Stoplamp Switch Circuit

DTC P1575

Extended Travel Brake Switch Circuit

DTC P1626



Theft Deterrent Fuel Enable Signal Lost

DTC P1630

Theft Deterrent Learn Mode Active

DTC P1631

Theft Deterrent Start Enable Signal Not Correct

DTC P1635

5 Volt Reference 1 Circuit

DTC P1637

Generator L-Terminal Circuit

DTC P1638

Generator F-Terminal Circuit

DTC P1639

5 Volt Reference 2 Circuit

DTC P1652

Powertrain Induced Chassis Pitch Output Circuit

DTC P1810

TFP Valve Position Switch Circuit

DTC P1860

TCC PWM Solenoid Circuit Electrical

DTC P1870

Transmission Component Slipping

DTC U1000 and U1255

Class 2 Communication Malfunction

DTC U1001-U1254

Lost Communication with XXX

DTC U1300

Class 2 Short to Ground

DTC U1301

Class 2 Short to Battery

Online URL: <https://www.corvetteactioncenter.com/tech/knowledgebase/article/2001-corvette-diagnostic-trouble-codes-226.html>