

# 1996 Corvette: Engine Diagnostic Trouble Codes

## 1996: Engine Diagnostic Trouble Codes

DTC P0100 MAF Sensor Circuit Insufficient Activity  
DTC P0101 Mass Air Flow (MAF) Sensor Performance  
DTC P0102 Mass Air Flow (MAF) Sensor Circuit Low Frequency  
DTC P0103 Mass Air Flow (MAF) Sensor Circuit High Frequency  
DTC P0106 Manifold Absolute Pressure (MAP) System Performance  
DTC P0107 Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage  
DTC P0108 Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage  
DTC P0112 Intake Air Temperature (IAT) Sensor Circuit Low Voltage  
DTC P0113 Intake Air Temperature (IAT) Sensor Circuit High Voltage  
DTC P0117 Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage  
DTC P0118 Engine Coolant Temperature (ECT) Sensor Circuit High Voltage  
DTC P0121 TP Sensor Circuit Insufficient Activity  
DTC P0122 Throttle Position (TP) Sensor Circuit Low Voltage  
DTC P0123 Throttle Position (TP) Sensor Circuit High Voltage  
DTC P0125 Engine Coolant Temperature (ECT) Insufficient for Closed Loop Fuel Control  
DTC P0131 HO2S Circuit Low Voltage Bank 1 Sensor 1  
DTC P0132 HO2S Circuit High Voltage Bank 1 Sensor 1  
DTC P0133 HO2S Slow Response Bank 1 Sensor 1  
DTC P0134 HO2S Circuit Insufficient Activity Bank 1 Sensor 1  
DTC P0135 HO2S Heater Performance Bank 1 Sensor 1  
DTC P0137 HO2S Circuit Low Voltage Bank 1 Sensor 2  
DTC P0138 HO2S Circuit High Voltage Bank 1 Sensor 2  
DTC P0140 HO2S Circuit Insufficient Activity Bank 1 Sensor 2  
DTC P0141 HO2S Heater Performance Bank 1 Sensor 2  
DTC P0151 HO2S Circuit Low Voltage Bank 2 Sensor 1  
DTC P0152 HO2S Circuit High Voltage Bank 2 Sensor 1  
DTC P0153 HO2S Slow Response Bank 2 Sensor 1  
DTC P0154 HO2S Circuit Insufficient Activity Bank 2 Sensor 1  
DTC P0155 HO2S Heater Performance Bank 2 Sensor 1  
DTC P0157 HO2S Circuit Low Voltage Bank 2 Sensor 2  
DTC P0158 HO2S Circuit High Voltage Bank 2 Sensor 2  
DTC P0160 HO2S Circuit Insufficient Activity Bank 2 Sensor 2  
DTC P0161 HO2S Heater Performance Bank 2 Sensor 2  
DTC P0171 Fuel Trim System Lean Bank 1  
DTC P0172 Fuel Trim System Rich Bank 1  
DTC P0174 Fuel Trim System Lean Bank 2  
DTC P0175 Fuel Trim System Rich Bank 2

DTC P0200 Injector Control Circuit  
DTC P0300 Engine Misfire Detected  
DTC P0323 DI Low/High Resolution Circuit Intermittent  
DTC P0325 Knock Sensor Module Performance  
DTC P0327 Knock Sensor (KS) Circuit Bank 1  
DTC P0332 Knock Sensor (KS) Circuit Bank 2  
DTC P0335 Crankshaft Position (CKP) Sensor Circuit  
DTC P0336 Crankshaft Position (CKP) Sensor Performance  
DTC P0372 DI High Resolution Circuit  
DTC P0400 Exhaust Gas Recirculation (EGR) System Performance  
DTC P0403 Exhaust Gas Recirculation (EGR) Solenoid Control Circuit  
DTC P0410 Secondary Air Injection (AIR) System  
DTC P0412 Secondary Air Injection (AIR) Relay Control Circuit  
DTC P0420 Catalyst System Low Efficiency Bank 1  
DTC P0430 Catalyst System Low Efficiency Bank 2  
DTC P0441 Evaporative Emission (EVAP) System No Flow During Purge  
DTC P0443 Evaporative Emission (EVAP) Purge Solenoid Control Circuit  
DTC P0500 Vehicle Speed Sensor (VSS) Circuit  
DTC P0506 Idle Speed Low  
DTC P0507 Idle Speed High  
DTC P0530 Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit  
DTC P0531 Air Conditioning (A/C) Refrigerant Pressure Sensor Performance  
DTC P0562 System Voltage Low  
DTC P0563 System Voltage High  
DTC P0601 Control Module Read Only Memory (ROM)  
DTC P0602 Control Module Not Programmed  
DTC P1107 Manifold Absolute Pressure (MAP) Sensor Circuit Intermittent Low Voltage  
DTC P1111 Intake Air Temperature (IAT) Sensor Circuit Intermittent High Voltage  
DTC P1112 Intake Air Temperature (IAT) Sensor Circuit Intermittent Low Voltage  
DTC P1114 Engine Coolant Temperature (ECT) Sensor Circuit Intermittent Low Voltage  
DTC P1115 Engine Coolant Temperature (ECT) Sensor Circuit Intermittent High Voltage  
DTC P1121 Throttle Position (TP) Sensor Circuit Intermittent High Voltage  
DTC P1122 Throttle Position (TP) Sensor Circuit Intermittent Low Voltage  
DTC P1133 HO2S Insufficient Switching Bank 1 Sensor 1  
DTC P1134 HO2S Transition Time Ratio Bank 1 Sensor 1  
DTC P1153 HO2S Insufficient Switching Bank 2 Sensor 1  
DTC P1154 HO2S Transition Time Ratio Bank 2 Sensor 1  
DTC P1171 Fuel System Lean During Acceleration  
DTC P1187 EOT Sensor Circuit Low Voltage  
DTC P1188 EOT Sensor Circuit High Voltage  
DTC P1222 Injector Control Circuit Intermittent  
DTC P1351 Ignition Coil Control Circuit High Voltage  
DTC P1361 Ignition Coil Control Circuit Low Voltage

DTC P1371 DI Low Resolution Circuit  
DTC P1380 Misfire Detected - Rough Road Data Not Available  
DTC P1381 Misfire Detected - No Communication with Brake Control Module  
DTC P1415 Secondary Air Injection (AIR) System Bank 1  
DTC P1416 Secondary Air Injection (AIR) System Bank 2  
DTC P1441 Evaporative Emission (EVAP) System Flow During Non-Purge  
DTC P1508 Idle Speed Low - Idle Air Control (IAC) System Not Responding  
DTC P1509 Idle Speed High - Idle Air Control (IAC) System Not Responding  
DTC P1539 Air Conditioning (A/C) Clutch Feedback Circuit High Voltage  
DTC P1545 Air Conditioning (A/C) Clutch Relay Control Circuit  
DTC P1546 Air Conditioning (A/C) Clutch Feedback Circuit Low Voltage  
DTC P1572 ASR/TCS Active CKT Low Voltage Too Long  
DTC P1641 Cooling Fan Relay 1 Control Circuit  
DTC P1642 Cooling Fan Relay 2 and 3 Control Circuit  
DTC P1643 Engine Speed Output Circuit  
DTC P1652 Vehicle Speed Output Circuit  
DTC P1657 Skip Shift Solenoid Control Circuit  
DTC P1661 Malfunction Indicator Lamp (MIL) Control Circuit  
DTC P1664 Skip Shift Lamp Control Circuit

Online URL: <https://www.corvetteactioncenter.com/tech/knowledgebase/article.php?id=549>