


1985 Corvette: Service News: Revised Differential Case Cross Pin Installation Procedure



Subject: Revised Differential Case Cross Pin Installation Procedure

Model and Year: 1985 Corvette

Source: Chevrolet Service News

Page Number: NA

Date: March/April 1985 - Volume 57 - Number 2

Figure 4B-39 shown on Page 4B-16 and step 10 shown on Page 4b-17 of the 1985 Corvette Shop Manual (ST-364-85) have been revised as indicated below. Fig. 4 replaces Figure 4B-39 presently shown in the Shop Manual.

10. Position the cross pin shaft in the case and drive in with a hammer. Be sure the retaining pin hole of the cross pin shaft is properly aligned to allow installation of the retaining pin. Install the retaining pin to the proper depth using a punch and stake in place at both ends of the case.

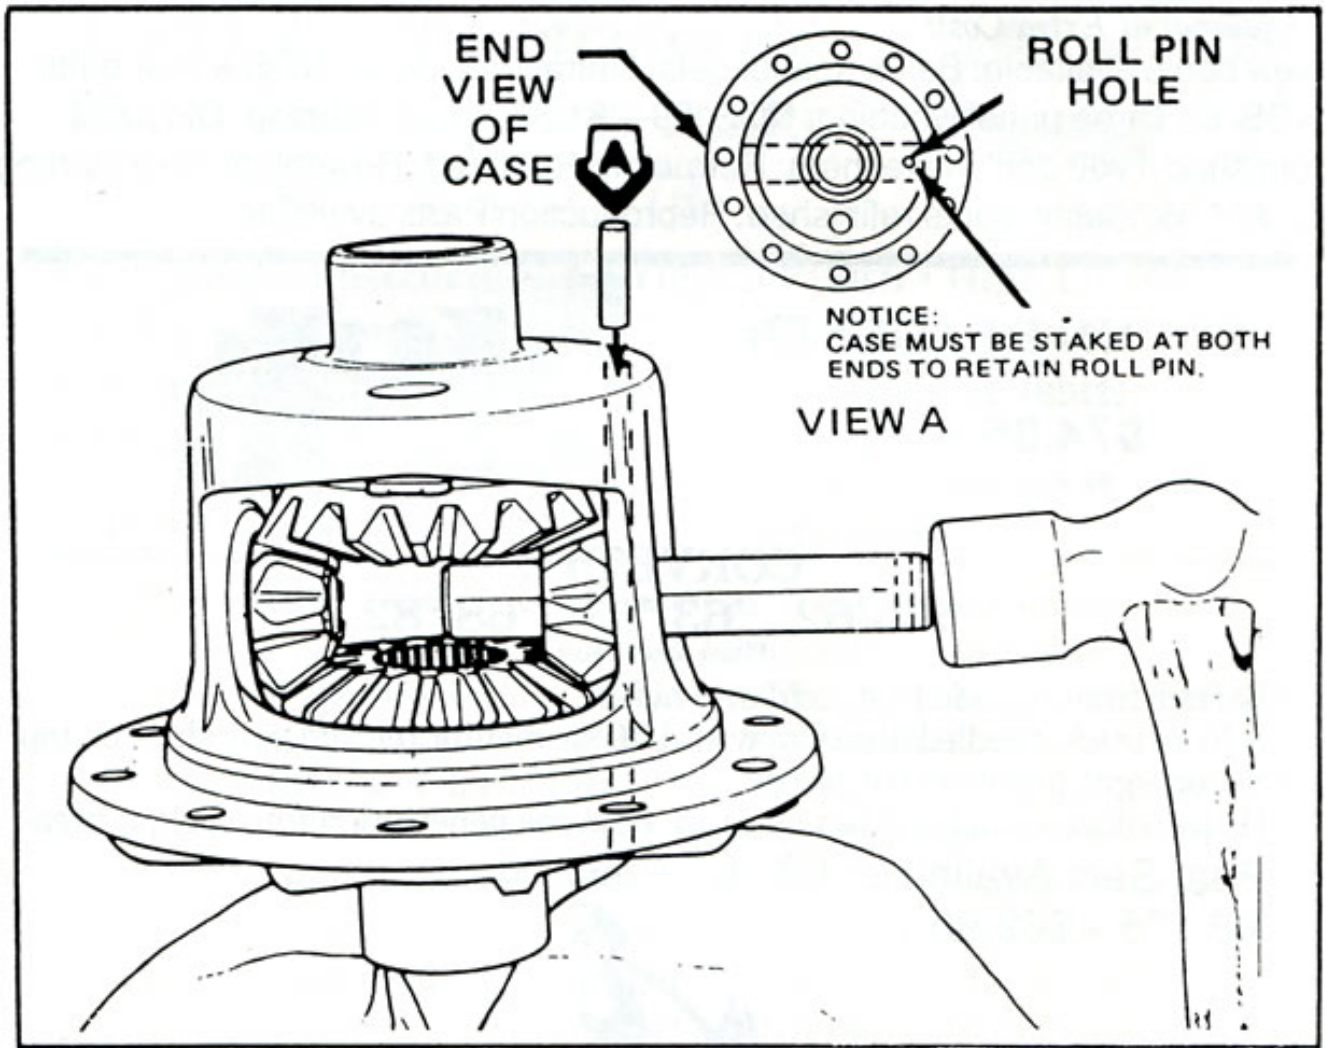


Fig. 4 — Installing Cross Pin

Online URL:

<https://www.corvetteactioncenter.com/tech/knowledgebase/article/1985-corvette-service-news-revised-differential-case-cross-pin-installation-procedure-948.html>